

Contents

1. Preface
2. Safety Notices
3. Ready to Use
 - 3.1 Packing List
 - 3.2 Product Appearance
 - 3.3 Instructions on Keys
 - 3.4 Features Overview
 - 3.5 Technical Specifications
4. Quick Guides
 - 4.1 Switch On/Off
 - 4.2 Battery Management and Charging
 - 4.3 Operation of the Function Icons
 - 4.4 WIFI Settings
 - 4.5 USB-HOST and Extended Function
 - 4.6.1 External USB Function
 - 4.6.2 External 3G USB Dongle Function
 - 4.6.3 External RJ45 USB Dongle Function
 - 4.7 Camera Function
 - 4.8 HDMI Function
 - 4.9 MicroSD Card Storage
 - 4.10 APK Install and Manage
5. Operation Details
 - 5.1 Desktop System 1(Multimedia)
 - 5.1.1 Audio Player
 - 5.1.2 Video Player
 - 5.1.3 Photo Browser
 - 5.1.4 Sound Recorder
 - 5.1.5 Explorer
 - 5.2 Desktop System 2 (E-book)
 - 5.2.1 Local E-book Reader
 - 5.2.2 Online E-book Reader
 - 5.3 Desktop System 3 (Network Function)
 - 5.3.1 Web Brower
 - 5.3.2 Email
 - 5.4 Desktop System 4 (Games)
 - 5.5 Desktop System 5 (Other Functions)
 - 5.5.1 Calculator
 - 5.5.2 Clock
 - 5.5.3 APK Installer

- 5.5.4 Settings
 - 5.5.4.1 Wireless and network
 - 5.5.4.2 Sound
 - 5.5.4.3 Display
 - 5.5.4.4 HDMI
 - 5.5.4.5 Location and security
 - 5.5.4.6 Application
 - 5.5.4.7 Accounts and sync
 - 5.5.4.8 Privacy
 - 5.5.4.9 Storage
 - 5.5.4.10 Language and keyboard
 - 5.5.4.11 Voice input and output
 - 5.5.4.12 Date and time
 - 5.5.4.13 About MID
- 5.6 Desktop Function Icon and Setting
 - 5.6.1 Desktop Function Icon
 - 5.6.2 Desktop Notification
 - 5.6.3 Add, Move, or Delete Desktop Icon
- 6. Firmware Update
- 7. Troubleshooting and FAQ
 - 7.1 Troubleshooting
 - 7.2 Frequently Asked Questions
- 8 Limitations of Liability Statement
 - 8.1 Links to Third Party Sites
 - 8.2 Limitation of Liability

1. Preface

Dear Customers,

Thank you for purchasing our product!

This device is a built-in high performance WiFi receiver module, supporting an external 3G USB-DONGLE wireless network card, using broadband wireless networks, breaking through the restraint of network cables; it will bring you into the portable media player world and fulfill your entertainment needs. It also supports picture browsing, eBook reading, games, online chat and other functions; various settings will fully show your individuality.

To operate this player easily, first, please read this User Manual included with the player. Before operating this player, please carefully read all data we provide about the player, so that you will have a better understanding of the product and its operations.

The Company will not be responsible for any loss of personal data and damage caused by incorrect operation of the Software/Hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of your data, please backup your data to your computer at all times.

Also, since we cannot control any dispute from users' misunderstanding or incorrect operation against the manual, the Company will not take any relevant responsibility for any accidental loss potentially occurring in the process of using this manual.

Due to constant product development, the information in this manual is subject to change without any prior notice.

This manual is protected by copyright and no part is permitted to be copied or reproduced in any way without prior written permission of the Company.

The Company reserves the final explanation right of this manual, warranty as well as its related information.

(Note: When compiling this manual, we are very careful to provide you completely reliable information. However, there is inevitably some error and oversight, please understand, and we welcome your suggestions. If any problem occurs during your use of this product, please immediately contact your local seller)

Thanks for your support and please pay attention to our other products

2. Safety Notices

- 1) Please keep the device away from strong magnetic fields in order to avoid damage to the product.
- 2) Please do not let the device fall onto, rub against or knock against hard objects during use, because this may cause surface scratches on the device, battery damage, data loss or other damage to the hardware.
- 3) Never let this product be exposed to a humid environment or rain as the water leaking into the device could disable it to the extent of being beyond repair.
- 4) Never clean the device with any chemicals or detergent, these will damage the product surface and corrode the finish.
- 5) You are recommended not to use the headset with the volume at its highest settings, please adjust the volume to an appropriate safe level and limit the amount of time you spend using headphones to avoid possible damage to your hearing. Excessive volume will cause permanent hearing damage.
- 6) Please do not cut off the power abruptly during software updates or downloading, because this may cause data loss or system errors.
- 7) Over-voltage, power cable strain and bending or squeezing of the power cable by heavy objects must be avoided to prevent the possibility of overheating or fire.
- 8) In order to eliminate the risk of electric shock, do not touch the cable power plug with wet hands.
- 9) Some movies, music and pictures are under the protection of copyright, unauthorized usage is deemed as an infringement to the laws of copyright.
- 10) Please don't turn on the device on in locations where wireless equipment is forbidden or when the usage of the device will cause interference and possible danger.
- 11) All the wireless equipment is subject to external interference and this can affect its performance.
- 12) Please comply with any related restrictions and rules, wireless equipment can influence the flight of the plane; please consult the relevant airline company if you intend to use the device on a plane.
- 13) Please don't use the device in a petrol station, or near to fuel or chemicals.
- 14) Please comply with any related restrictions and rules; do not use the device where blasting operations are in progress.
- 15) Only qualified maintenance personnel can install or repair the

device. Opening the device in any way will void the warranty.

16) Please use the original accessories and battery provided with the device, do not use the incompatible products.

17) The device is not waterproof, please keep it dry.

18) For the sake of data safety, please back up any important information on the device, or keep a handwritten record.

19) When connecting with other devices, please read the user manual for detailed safety instructions. Do not connect the device to incompatible products.

3. Ready to Use

3.1 Packing List

Components	Quantity
eGlide Pro 2 Tablet	1
Wall Charger	1
USB Cable	1
User Manual	1
CD-Rom	1
Warranty Card	1
eMusic Card	1
Kobo Offer	1

3.2 Product Appearance



3.3 Instructions on Keys

Symbol	Name	Description
A	RESET	Short press this button to reset the system when the device has stopped working (Freezes)
B	POWER	Short press this button to enter sleeping/wake up mode, press long to switch ON/OFF
C	MENU	Press this button shortly to enter the submenu
D	ESC	Short press to return, long press to enter the touch screen calibration
E	MicroSD Card Slot	Micro SD Card Slot
F	HDMI	1080P HDMI Jack
G	Stereo Earphone Jack	Stereo Earphone Jack
H	DC Socket	Connect with 5V@2A Charger
I	MINI USB Port	MINI_5 PIN USB Port
J	USB Host Port	Port for external USB Driver,3G Dongle, Mouse, etc
K	Display	HD Display area
L	Camera	Front camera

3.4 Features Overview


- ARM embedded Dual CPU Structure (ARM Cortex A9 1.0GHz) with ANDROID 2.3 operating system
- 7" high resolution TFT capacitive multi touch panel LCD display, 800x480 pixel resolution
- Supports 4GB built-in Flash memory, supports max. 32GB external Micro SD card
- Supports HD 1080P MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP, H.246 etc formats, Max resolution supported is 1920*1080
- Supports MP3, WMA, OGG, APE, FLAC, AAC, WAV audio formats and multi EQ modes
- Supports JPG, JPEG, BMP, GIF etc. picture formats
- Supports TXT, LRC, PDF, Html, EPUB file formats, supports auto-browse, zoom, bookmarks, flip over functions
- WiFi ready, you can connect with broadband wireless internet and operate various software in the Android 2.3 OS, the system is preset parts of third softwares: Office (Open Office version), Google browser, IM (MSN/QQ), Web TV, Online MP3, online novel, network games, eBook, etc
- Supports built-in microphone recording function
- Supports USB-HOST and external U-disk, Keyboard, Mouse, etc
- Supports external 3G USB-DONGLE wireless network card (3G card or USB-Dongle should be purchased separately)
- Supports built-in front web camera
- Supports 1080P HDMI output
- Supports G-sensor screen rotation function
- Supports built-in speaker and stereo earphone jack
- Supports multiple languages
- Can be used as a USB portable hard disk, driver not needed for WIN2000 or above

 
3.5 Technical Specifications

LCD Display	Size	7.0" TFT capacitive touch panel LCD display 160k color
	Resolution	800x480
PC interface	High speed USB2.0 (FS)	
Built-in Flash	Flash Memory: 4GB	
Built-in RAM	RAM: DDRIII 512MB	
Capacity Expansion	Support MicroSD Card, capacity 1GB~32GB	
Power Supply	Built-in 3.7V@4000mAH Lithium rechargeable battery AC charger, Input: AC110V~240V, Output: DC 5V@2A	
	Max. 6h video playing time (factory default)	
Music Function	Format	MP3, WMA, OGG, APE, FLAC, AAC, WAV
	Headset max. output	(L) 5mW+ (R) 5mW (32Ohm)
	MP3 Bit rate	8Kbps ~ 392 Kbps
	WMA, WMV, Bit rate	5Kbps ~ 192 Kbps
	Frequency response	20Hz to 20KHz
	SN ratio	90dB
	Distortion	<0.05%
Video Function	Play format	MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP, etc
	Max Resolution	1920x1080
	Ratio	4:3, 16:9, full screen for optional
Photo Browse	Support max. 8000x8000 JPG, JPEG, BMP, GIF	
EBook Function	Format	TXT, LRC, PDF, Html, Htm, EPUB, etc
	Max. capacity	5M
Wi-Fi Function	Main chip set	802.11b/g/n
	Transmission rate	Max108Mbps
	Work Frequency	2.4GHz
HDMI Function	Main chip set	IT6610 (Optional)
	Resolution	720P, 1080P
Camera Function	Support front web camera function	
Recording function	Format	WAV
Working temperature	-5 - 40 °C	
Languages	English, French, German, Spanish, Simplified Chinese, Traditional Chinese, etc	
Operation systems supported	Windows98SE/ME/2K/XP	

4. Quick Guides

4.1 Switch On/Off

Switch ON and Unlock: When the device is in its OFF mode, press and hold the Power key for 3 seconds to enter the Android startup process. The device will take about 100 seconds to enter the system desktop, with the display in locked mode, please press and slide the  icon out of the white circle, the display will unlock automatically, see the image below:

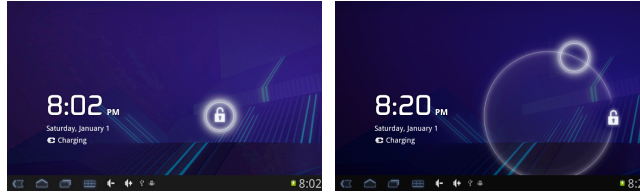

When the device is not in use, please put it into SLEEP mode, then the device will be ready to use whenever you like, and you don't need to start the Android operating system again.

4.1.1 Power Saving Mode and Locked Mode: Pressing the "POWER" key when the device is in use will result in the system entering SLEEP power save and locked mode. Pressing the POWER key will return the system to locked mode within 1 second.


Note: The primary operation of the device will not stop under the power saving mode, it is just the display that is turned off and showing a black screen. This means that music or movie playback etc. will still continue to run.

4.4.2 Switch OFF: When the device is in use, press and hold the POWER key for 3 seconds, the screen will display the power off interface, choose the power off option to confirm your selection and the system will shut down automatically.

Note: When the device is running low on battery power, it will sound an alarm and then shut down automatically if it isn't plugged into a power source to start charging. If the device cannot start up please check if the battery power is too low by charging the device.

4.2 Battery Management and Charging

4.2.1 Charge the battery about 8-12 hours to make sure the battery is fully charged for the first time.

4.2.2 Insert the micro port of the battery adaptor into the DC slot on the device, and connect the other side with the power socket. The desktop icon of the battery  will be rolling to show it is charging, please wait until the battery is fully charged, don't disconnect the

power when charging. Once the battery is fully charged the Icon on the desktop will stop rolling. When the battery is exhausted completely, please charge at least one minute before starting it up
Note: In order to keep the battery working to its full potential, please pay attention to the following advice:

- 1) Don't charge the power in excessively high temperatures.
- 2) There is no need to run down the power for this Li-ion battery, you can charge the battery even when there is still power left in the battery without it affecting the lifespan of the battery.
- 3) In order to keep the battery in good condition, Make sure you charge it at least once every two weeks if the device hasn't been used for a long time.

4.3 Operation of the Function Icons




Definition of the Function Icons:


Icon	Function instruction	Icon	Function instruction
	Back to main menu		Notifications
	Google Search		Voice Search
	Menu Switch		App Menu
	Browse All Menu		Google Search
	Return		Home Page
	Recent Browse		Function Menu
	Reduce the volume		Increase the volume
	Notifications		WiFi Status
	Power Status		System Time

4.4 WI-FI Settings

 4.4.1 Turn on WIFI: Tap the App Menu icon to enter into the app menu list, tap "Settings" to enter into the setting interface, tap "Wireless and networks" to setup, select the "WiFi" as below:

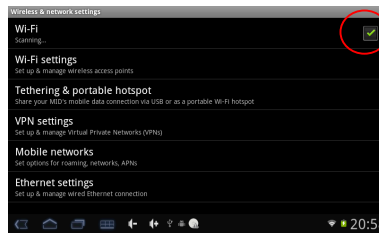


 4.4.2 Connecting to a network: Tap “Wi-Fi Settings” to enter this menu, the device will find the WiFi networks automatically. Please refer to the example picture below, it has found several WiFi network names:

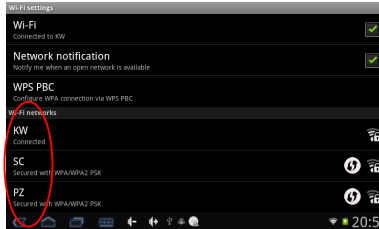

After selecting the network you would like to connect to, the system will either connect to the network. If the network is secured and requires a security key to be entered, the system will pop up a connection window where you can input the correct security code and then press “Connect”.

 The system will connect to the network automatically, and once connected will show a Status of “Connected” You can see the network connection status by pressing the network name, see the figure below:

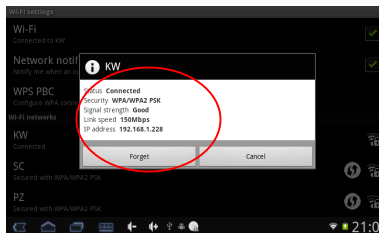


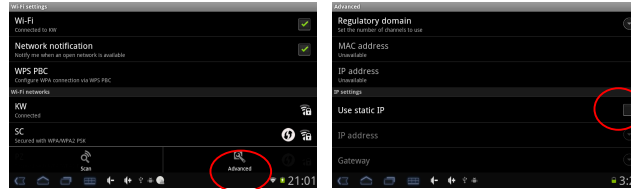 
4.2.3 IP address settings and connection: There are two setting methods to allow the IP address to be set. Whether the IP Address is


distributed automatically or not, is depended on the Wi-Fi Router's settings.


1) IP Address is assigned automatically:


By default this device is setup to be assigned an IP Address automatically.


If the wireless network you want to connect to, assigns the IP Address automatically, but the settings have been changed to a Static IP Address, use the following procedure to change the settings. Tap the Function Menu icon  on the bottom of the screen and tap "Advance", then un-tick the selection in the "Use static IP" box.




Tap the Function Menu icon  on the bottom of the screen then tap "Save" to complete this setting, see the figure as below:

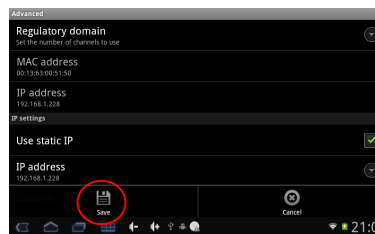 



Tap the Return icon  once complete, the system will return you to the Wi-Fi settings screen. Select the network you would like to connect to, for example, double tap "KW" network, the system will enter into an interface and ask you to input the code. Input the correct code and press "Finish", the system will connect and distribute the IP address automatically. It will show "Connected" once the system has completed connecting. You can see the network connecting status accordingly when you select the network name, see the figure shown below:

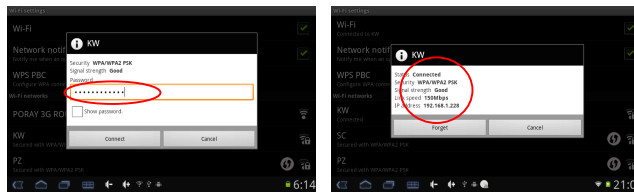 



2) Manual Setup – Static IP Address:

 
If the Wi-Fi network requires a Static IP Address, please use the following procedure to change the settings. Tap the Function Menu icon  on the bottom of the screen and tap “Advance” Select the “Use static IP” tick box, and then set the IP address, Gateway and Netmask using the information you have for that Network. See the figure below:

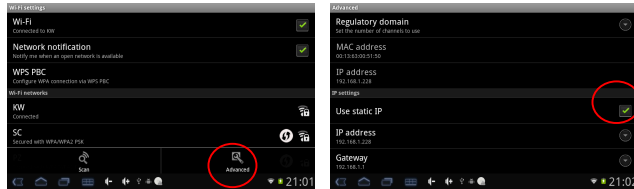

Tap the Function Menu icon  on the bottom of the screen then tap “Save” to complete this setting, see the figure as below:

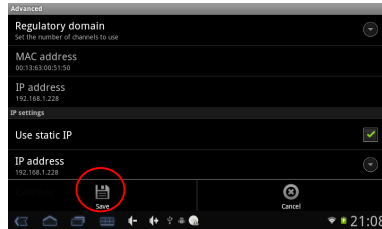 


Select the network you would like to connect to, for example, double tap “KW” network, the system will enter into an interface and ask you to input the code. Input the correct code and press “Finish”. The systems will connect to the static IP address that you input. It will show “Connected” once the system has completed connecting. You can see the network connecting status accordingly when you select the network name. There will be a WIFI icon  see the figure as below:

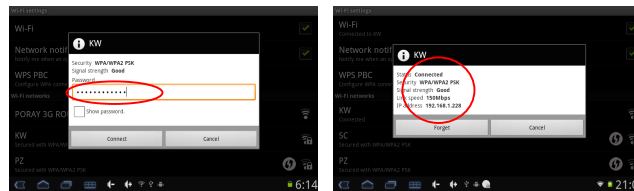 


4.6 USB-HOST and Extended Function

If you would like to attach an external USB device such as a 3G USB Dongle, USB Storage Device or USB Keyboard, please follow the procedure below.


4.6.1 External USB Function

 This device supports OTG function. Please insert the USB disk into the USB HOST port, then tap the "Explorer" located in the applications  menu, select "USB" to enter into USB disk, see the figure shown below:

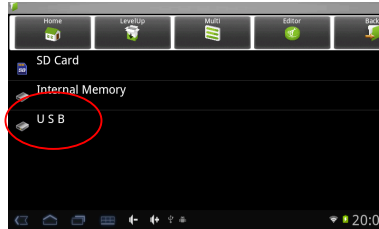


To unmount the USB disk, enter the settings menu. Then select storage, scroll down to USB storage and select "Unmount USB Storage". You will be prompted when it is safe to remove the USB disk.

4.6.2 External 3G USB Dongle Function

- 1) Insert the 3G USB-Dongle to USB HOST interface.
- 2) Press "Settings", to enter into the setting interface, press "Wireless and networks" to enter the setup interface. Un-tick box behind the "Wi-Fi" to disable it (**Note:** Wireless and Mobile networks can't be enabled at the same time). Tick the box behind "Mobile network" in to enable mobile networking, the 3G network icon  will be showed on the bottom of the screen when device


connects the 3G successfully.

  Note: If mobile networking won't turn on, please check and confirm the 3G USB Dongle that you are trying to use is compatible with this device.

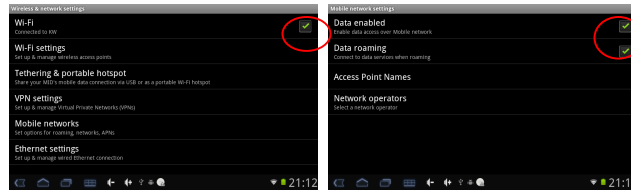


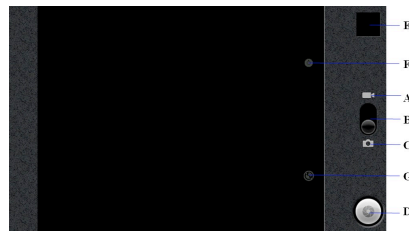 
4.6.3 External RJ45 USB Dongle Function

- 1) Insert the External RJ45 Card USB Dongle, and tap the "Ethernet settings" into the network settings.
- 2) Select "Ethernet", if the Router assigns the IP address automatically, the system will connect to the network automatically. If the IP address is assigned statically, please select "Use static IP", then set the correct IP address, Gateway, Netmask and DNS to connect the network.

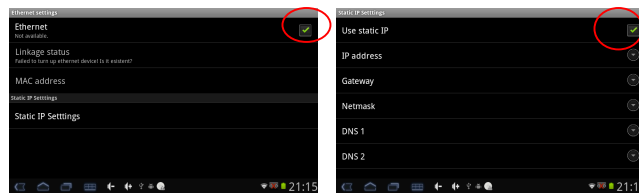

4.7 Camera Function

 
Tap the App Menu icon  to enter into the app menu list, tap "Camera" to enter into the camera function interface:





Camera function buttons description:

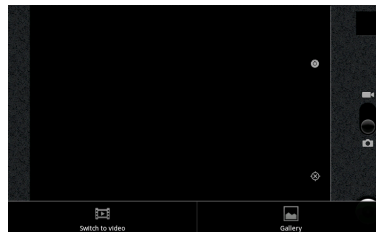

Button	Button Description	Function Introduction
A	Video Icon	When B slides to A, it is the Video Mode
B	Video and Photo Switched Icon	For selecting the Video/ Photo function
C	Photo Icon	When B slides to C, it is the Photo Mode
D	Starting and Stopping Icon	For starting/stopping the Video/ Photo
E	Photo/Video Preview Icon	For previewing the Video/ Photo
F	Camera Setting	Tap to view the setting options
G	Store Location	Tap to select store location on/off

In the photo mode, tap the menu button, the interface pops up as below:



- 1) Tap  to switch to video function.
- 2) Tap  to preview the photos.

 


- 1) Tap  to change the Picture Size and the Picture Quality.
- 2) Tap  to set the Store Location Off or On.
- 3) Press Esc button to exit video/photo mode.

4.8 HDMI Function

You will enjoy 1080P HDMI video playback on your HD TV using the Video player function.


- 1) Connect the TV to the device by using an HDMI Cable.
- 2) Tap the "Settings" icon in the desktop, and then select HDMI settings to transfer the contents on the device to the TV display.

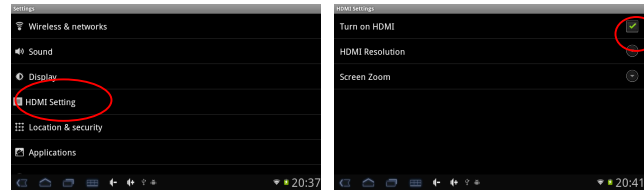

- 3) HDMI Resolution setup: Select the correct HDMI output resolution according to your HD TV configuration.



 - 4) Screen Zoom setup: Select the screen size of the output video.

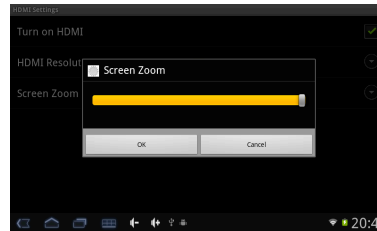


4.9 MicroSD Card Storage


There is a MicroSD card slot in this device. It supports reading files on a MicroSD card.


- 1) Insert the memory card into the card slot on the correct side (metal contacts facing down).
- 2) Do not pull out the card when it is in use (reading, copying), otherwise, it may cause data errors.

 - 3) Do not use the memory card in high temperature conditions.
- 4) Keep the memory card away from liquid and erosive materials.
- 5) To remove the card, enter the settings menu and select storage settings. Select "Unmount SD Card". You will then be prompted when it is safe to remove the card. Just push the card towards the slot, this will automatically release the card.

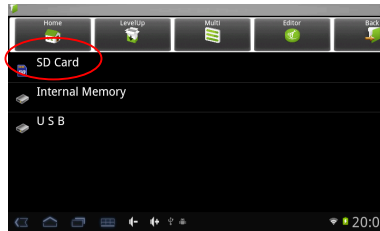


4.10 APK Install and Manage

 This device supports installing third party applications programs designed to run on Android. Many application programs can be downloaded from internet and then installed by the APK Installer. Tap the App Menu icon  to enter into the app menu list, tap "APK Installer" to enter into the interface as below:

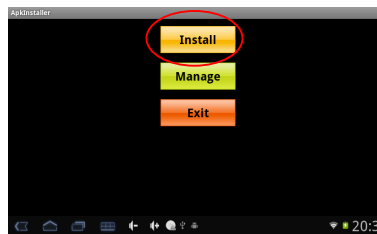

 4.10.1 Install: Press "Install" to enter into the APK installer interface. The installation .apk files could be installed from two locations: 1) Internal Memory which means the built-in storage. 2) MicroSD Card which means a memory card inserted into the MicroSD card slot. Select the program to be installed from the right window, tap it to install and follow the prompts.

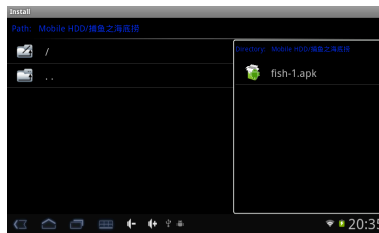


4.10.2 Manage: Tap to Launch, Export, Uninstall the applications. The default view shows all the applications installed on the device, tap the icon of the application you would like to manage.



- 1) Launch: Tap to run the software.
 - 2) Export: Tap to export the software to the MicroSD card.
 - 3) Uninstall: Tap to uninstall the software.
 - 4) Cancel: Tap to return to the main menu.
- Note:** Only the user-installed applications could be uninstalled.


5. Operation Details

 5.1 Desktop System 1 (Multimedia)

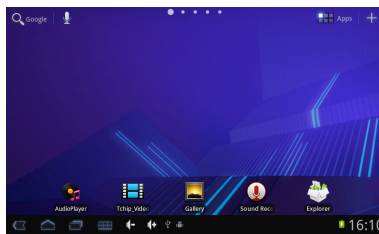






5.1.1 Audio Player

The device supports the following audio file formats: mp3, wav, midi and wma.

In the application menu or on the desktop, tap the icon  to launch the audio player.

If there are no music files in the audio player playlist, the system will automatically load any music files from the MicroSD card to the audio player playlist after the audio player is launched.



- 1) If there are many songs in the music play list, slide up/down the list by using the touch screen.
- 2) In the music playing interface, tap  to enter into the audio playing list.
- 3) Drag the playback progress bar  to adjust audio playback progress.
- 4) Drag  bar to adjust the audio play volume.
- 5) Tap  to change play mode.
- 6) Tap  to change the play EQ.


Audio Player Buttons Description:

Button	Function	Button	Function
	Current Playing		Play Audio
	Go to previous song		Skip to next song
	Audio List		Artist
	Album		Playlist

 
Note: Audio player can play WAV record files



 
5.1.2 Video Player

The device supports the following video file formats: MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP.



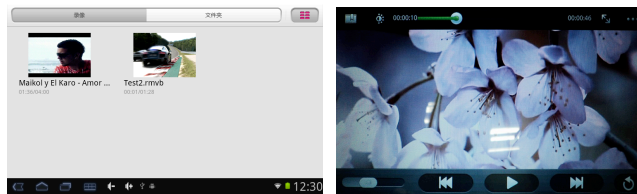





In the application menu or on the desktop, tap the icon  to enter into the video player interface.


When no video files are in the video player playlist, the system will automatically load any music files from the MicroSD card to the video player playlist after the video player has been launched.




- 1) If there are many videos available, please slide up/down the list by using the touch screen.
- 2) Tap the icon  to change the file list pattern.
- 3) Drag the playback progress bar  to adjust audio playback progress.
- 4) Drag  bar to adjust the audio play volume.


Video Player Buttons Description:

Button	Function	Button	Function
	Add video bookmark		Adjust brightness
	Video size		Menu
	Go to previous video		Skip to next video
	Play and Pause		Quit

 - 5) Tap the menu icon  to select Delete Bookmark and Play from Beginning, Delete Bookmark, Play mode, Help, or tap Return to go back to the previous menu, please check the figure as shown below:

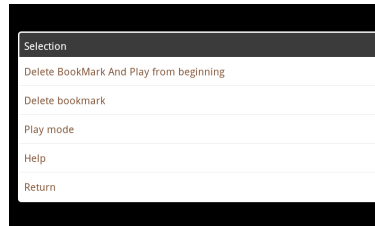

 
- 6) Tap Play Mode to select one of the play modes: Single, Repeat one, Repeat all, or tap return to go back to the previous menu

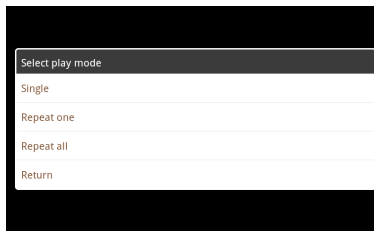


7) HDMI Video out, for details please refer to HDMI Function in Chapter 5.5.4.4.

5.1.3 Photo Browser

The device supports picture formats of BMP, JPG, JPEG, PNG and GIF.

In the application menu or on the desktop, tap the Gallery  icon to enter the photo browser.

 If there are no files in the photo list, the system will automatically load the image files from the Micro SD card to the photo browsing list after the photo browser has launched.

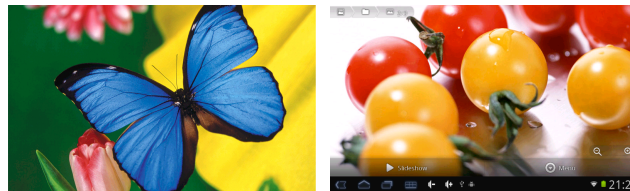








- 1) To view a picture, navigate to the image you would like to view and select it.
- 2) Tap and slide the touch screen to left/right to view the previous/next picture.
- 3) Tap the icon  to return to the Gallery interface/ Flash picture folder.
- 4) Tap the icon  to view the picture information.


Photo Browser Buttons Description:


Button	Function	Button	Function
	Zoom out		Zoom in
	Slideshow		Menu



- 5) Tap the menu icon  to select Share, Delete or more functions, please check the figure as shown below:



 
5.1.4 Sound Recorder

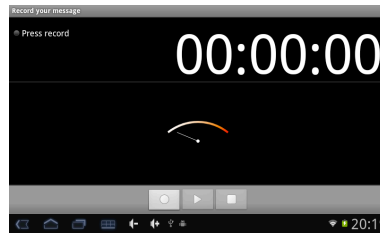
In the application menu or on the desktop, tap the  icon to enter into the sound recorder.




- 1) Tap the record icon  to start recording, tap the  icon to stop recording.
- 2) Once you finish the recording, you will be asked if you want to "Use this recording" or "Discard" the recording.
- 3) Recording playback: Use Explorer to find the Record folder on the Internal Memory storage, select the recording to playback by tapping on it. For more details about playback please refer to 5.1.1 (Audio Player).

5.1.5 Explorer

 In the application menu or on the desktop, tap the  icon to enter the file management Interface. Tap Micro SD Card, Internal Memory or USB to open their root directory folders and files.

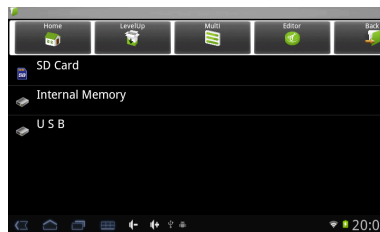

 
- 1) In the file explorer interface, tap and hold down on the icon of a file you want to manage.
- 2) A pop-up action menu, which includes Copy, Delete, Move, Paste, Rename, New folder etc will appear as below:

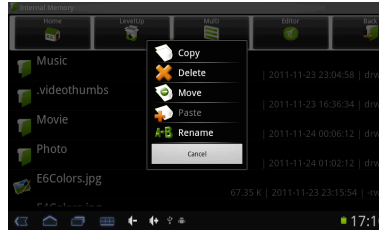


- 3) Choose the action and finish the management by the prompts.

 
5.2 System Desktop 2 (eBook)

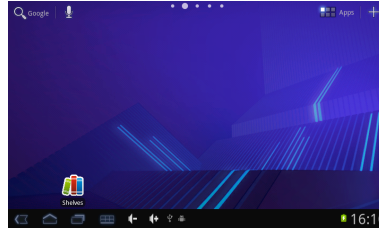

The device supports eBook formats: TXT, LRC, PDF, HTM, EPUB, etc., supports automatic browsing, zooming, bookmarks, page etc.



 5.2.1 Local E-Book Reader

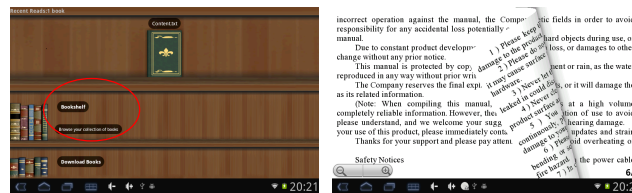Tap  on the desktop, to enter into the E-Book application. Tap the "Bookshelf" to open the folder and select the E-Book file to read.





- 1) Tap and slide the page to left/right side to flip over.
- 2) Zoom in/out the page by using the fingers or the icon .
- 3) Tap the menu icon  on the bottom of the screen to check more functions as shown below:


Contents


- 1. Preface
- 2. Safety Notices
- 3. Ready to Use
- 3.1 Packing List
- 3.2 Product Appearance
- 3.3 Instructions on Keys
- 3.4 Features Overview
- 3.5 Technical Specifications
- 4. Quick Guides
- 4.1 Touch Panel Calibration
- 4.2 Switch On/Off
- 4.3 Battery Management and Charging
- 4.4 Operation of the Function Icons
- 4.5 WDT Setting




4) Font Size: Tap  to set the font size, available font sizes: S, M, L, XL and XXL.

5) Go To: Tap  then a prompt box pops up, input the number of pages you want then click confirm so that it will automatically jump to the specified page.


6) Bookmarks: Tap  to add, delete display the bookmarks.

 
7) Book info: Tap  view the book name and information about the author.

8) Auto Flip: Tap  to set up the auto flip time or manual flip.

5.2.2 Online eBook Reader


Note: For the online eBook reader function, the device must be connected to a Wireless or 3G Network (for details refer to chapter 4.4 & 4.5).

Tap the icon  on the app menu or desktop to go to the eBook interface as shown below:

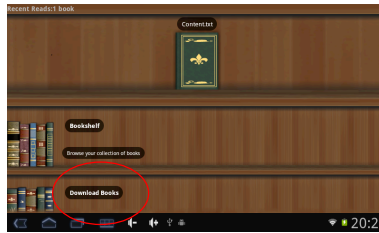


Select the “Download Books” to download online books by the prompts.

 
5.3 Desktop System 3 (Network Function)

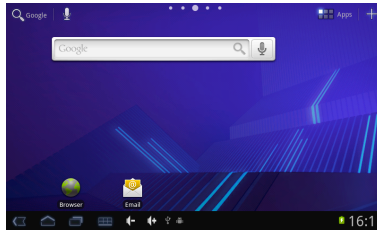

5.3.1 Web Browser

Note: For the Web Browser function, the device must be connected to a Wireless or 3G Network (for details refer to chapter 4.4 & 4.5).

 1) Tap the  icon on the app menu or desktop to enter to the Web Browser interface as shown below:

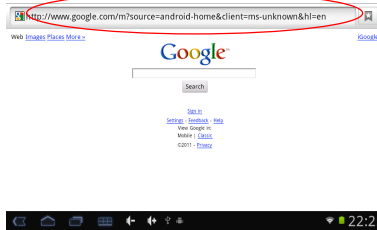


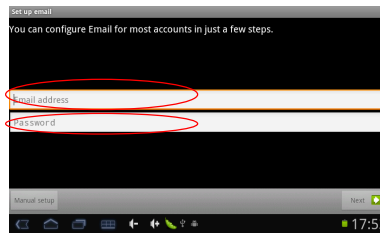 
2) Tap the address bar and input the website address for the website you would like to view by using the popup keyboards and then click "Go".

Note: The Web Browser for this device is adopted the popular third-party Android browser application; please follow the prompts and standard operating mode to operate.

5.3.2 Email

Note: For the Email function, the device must be connected to a Wireless or 3G Network (for details refer to chapter 4.4 & 4.5).

1) Tap the  icon on the app menu or desktop to enter to the Email interface as below:



 
Input the correct Email address Password by using the popup keyboards and then click “Next”.

Note: The Email Icon for this device is adopted the popular third-party Android Email application; please follow the prompts and standard operating mode to use it.

5.4 Desktop System 4 (Games)

You can download and install Android games from the Market place or Internet as you want, and then move the game icons to this desktop.


Tap the relevant game icon on the app menu or desktop to enter the game interface, you can play the game by following the instructions on the display.

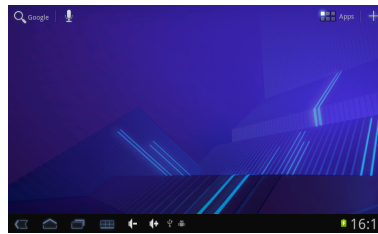

5.5 Desktop System 5 (Other Functions)




5.5.1 Calculator

Tap the  icon on the app menu or desktop to open the Calculator


function as shown below:





Tap the menu icon  on the bottom of the screen to check more functions as shown below:



 
5.5.2 Clock

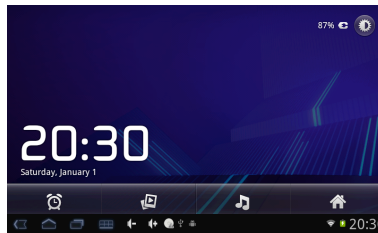


Tap the  icon on the app menu or desktop to open the Clock function as shown below:




- Tap  to set the alarm clocks.




- Tap  to enter the Photo Browser.

 
- Tap  to enter the Audio Player.
- Tap  to return the Main interface.
- Tap  to adjust the backlight.

5.5.3 APK Installer







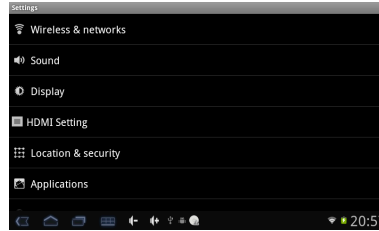






Tap the  icon on the app menu or desktop to open the APK Installer interface, for detail refers to Chapter 4.10.

5.5.4 Device Settings

Tap the  icon on the app menu or desktop to open the Settings interface, you can set wireless and network, sound and backlight, location and safety, application, etc. Slide on the screen to page up/down and view more setting options.



 Setting icons description:

Icon	Description	Icon	Description
	Wireless & networks		Sound
	Display		HDMI
	Location & security		Applications
	Accounts & Sync		Privacy
	Storage		Language & keyboard
	Voice input & output		Date & time
	About MID		

5.5.4.1 Wireless and network

 
For detail refer to Chapter 4.4 WIFI settings.

5.5.4.2 Sound

Tap "Sound" to enter the relevant settings interface.

1) Silent Mode

Tick the box behind "Silent Mode" to turn off all system sounds except media and alarms.

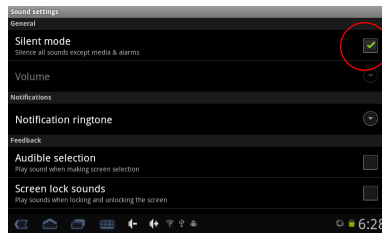


2) Volume

Tap “Volume” to adjust the volume of Ringtone, Media, Alarm and Notification, and tap “OK” to finish.




3) Notification Ringtone

 Tap “Notification Ringtone” to choose any of the default ringtones, and tap “OK” to finish.

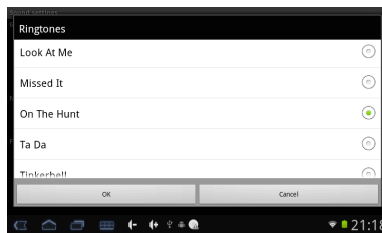

 4) Feedback

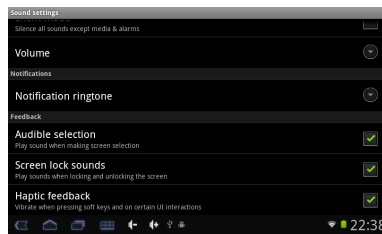


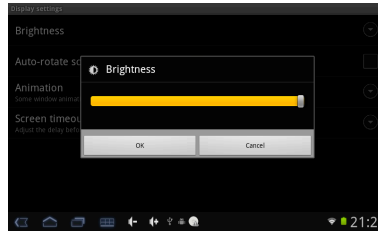 
- Audible selection: Select to play sound when making screen selection.
- Screen lock sounds: Select to play sounds when locking and unlocking the screen.
- Haptic feedback: Select to vibrate when pressing soft keys and on certain UI interactions.

5.5.4.3 Display

Tap "Display" to enter the relevant settings interface.

 
1) Brightness

Tap "Brightness" and drag  to adjust display brightness, tap "OK" to finish setting.




2) Auto-rotate screen

Tick the box behind the "Auto-rotate screen", the display screen will change the direction automatically when it is rotated.

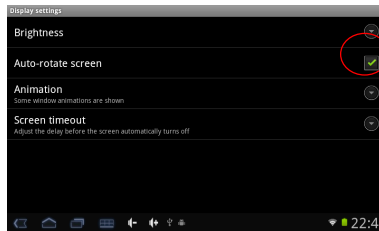


3) Animation

 Tap to select display "No animation". "Some animation", "All animation".

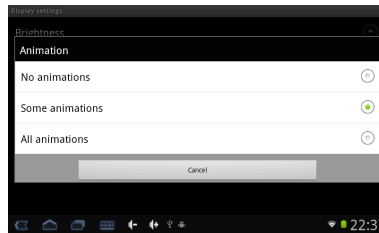

4) Screen timeout

 Tap to adjust the delay time before the screen automatically turns off.

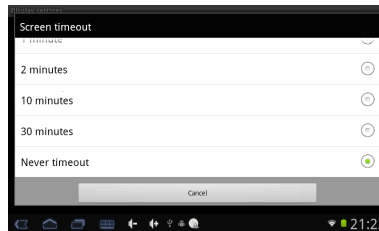

5.5.4.4 HDMI

 
For detail refer to Chapter 4.8 HDMI Function

5.5.4.5 Location and security setting

Tap "Location and Security" to enter the relevant settings interface.


1) My Location


Tick the box behind the "Use wireless networks", the location will be determined by Wi-Fi and/or mobile networks.


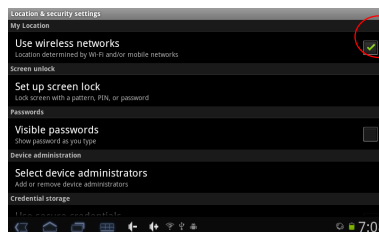


2) Screen unlock

 
Tap "Set up screen lock" to select screen unlocked with none, a pattern, or password.

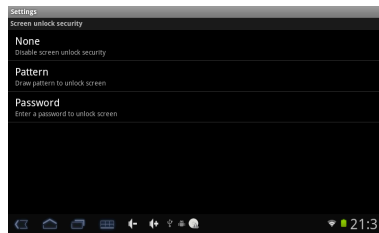

  Unlock screen by a pattern: Draw the unlock pattern with a minimum of 4 points, tap  to complete the setting.

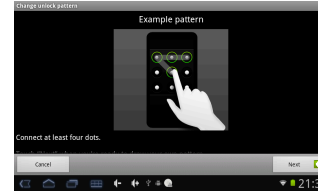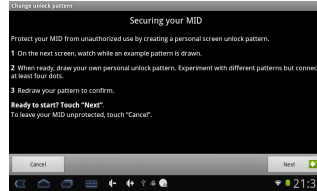


 Unlock screen by a password: Input a password with 4 characters, tap "OK" to complete the setting. The device will prompt you to input the correct password when unlocking.

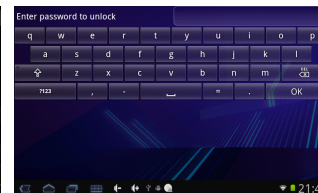

3) Visible password

 Tick the box next to "Visible password", the system will show the all the passwords as you type.

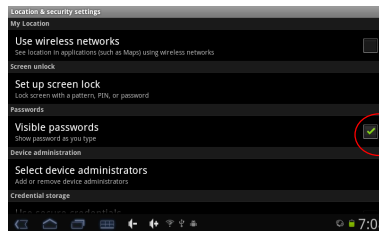


5.5.4.6 Application setting

Tap "Application" to enter the relevant settings interface:

1) Unknown sources:

 Tick the box behind the "Unknown sources", the system will allow installation of non-Market applications..

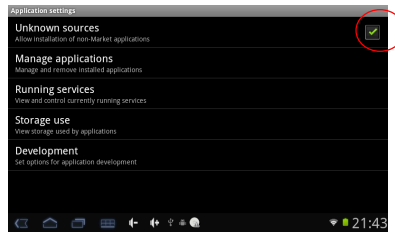

2) Manage applications

 
Tap "Manage applications" to view and manage all applications.

3) Running services

Tap "Running service" to view and control the running services.


4) Storage use

Tap "Storage use" to view storage used by applications

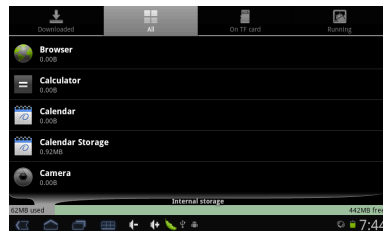

4) Development

 Tap to set USB debugging, Stay awake and Allow mock locations.

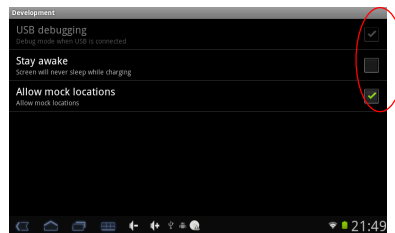

USB debugging: Tick the box behind it to set debug mode when USB is connected.

 
Stay awake: Tick the box behind it to set the screen to never sleep

while charging.

Allow mock locations: Tick the box behind it to allow mock locations.

5.5.4.7 Accounts and sync

It is recommended to use the factory defaults in the “Accounts and sync” settings interface, any changes will make some functions unavailable.

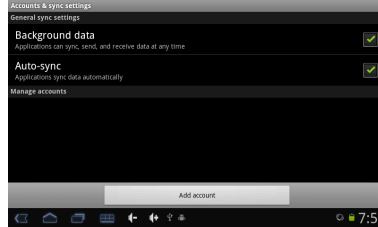


5.5.4.8 Privacy

Tap “Privacy” to enter into relevant setting interface.

1) Backup and restore


Tick the box behind the “back up my data” to back up application data, Wi-Fi passwords, and other settings to Google servers.

 Tick the box behind the “Automatic restore”, the system will restore backed up settings or other data if it reinstalls an application.

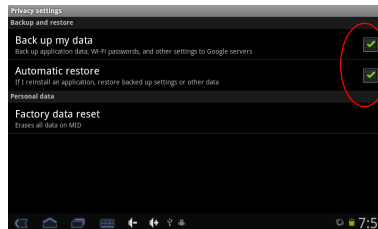

2) Personal data

 
Tap “Factory data reset” to erases all data on the device.

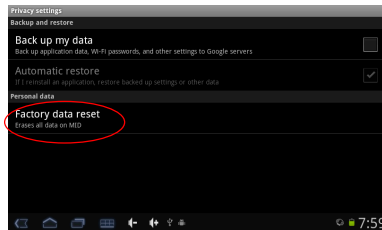

Note: Please back up all your data of the internal memory before resetting the device, or you will lose all the data.


5.5.4.9 Storage

 Tap the “Storage” to check the status of MicroSD card, USB storage, NAND flash and internal storage.

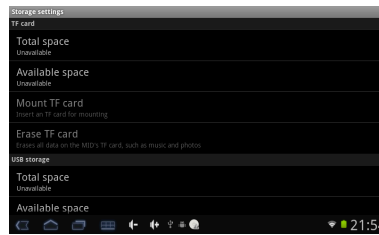


5.5.4.10 Language and keyboard

 Tap “Language & Keyboard” to enter the following settings interface:

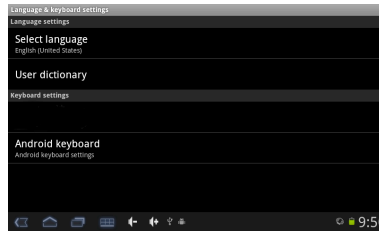


1) Language settings

The device supports multi-languages. You can select an operation interface of different languages according to your needs. Select a language option, tap  to confirm and go back.




2) Keyboard settings

 Tap “Android keyboard” to set up the onscreen keyboard input method.

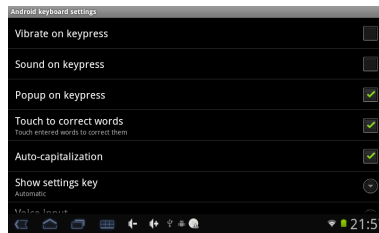

5.5.4.11 Voice input and output

 Tap the “Voice input & output” to enter the following settings interface, you can set up the voice recognizer and text-to-speech as you need.

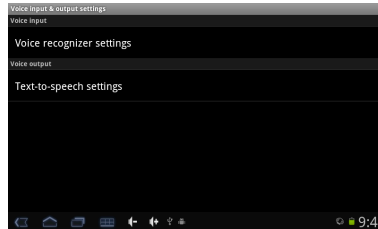


5.5.4.12 Date and time setting

Tap “Date & time” to enter the relevant setting interface:

1) Automatic

 
Select “Automatic” to set the date and time automatically by using network-provided values.

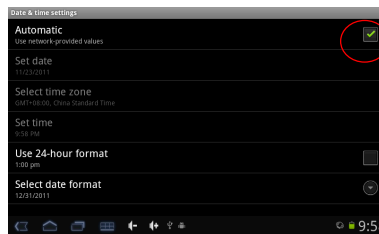

Untick the box behind the “Automatic” to modify the Date, Time Zone & Time manually.


2) Set date

 Tap to select Day, Month and Year, and tap the icon to finish the setting.

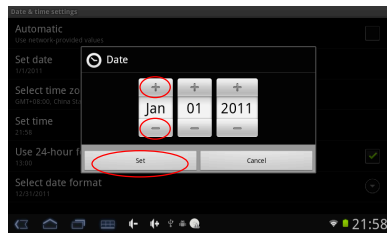


3) Select time zone

 Tap to select the time zone that you are in.

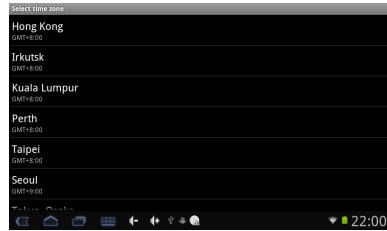


4) Set time

 Tap **+** **-** to select hours and minutes, and tap the icon **Set** to finish the setting.

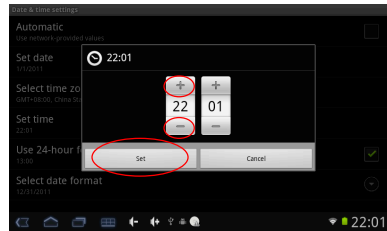


4) Use 24-hour format

 Tap to set the system time showed by 24-hour format.

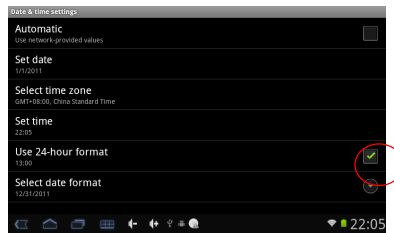


5) Select date format

 Tap to select the date format.

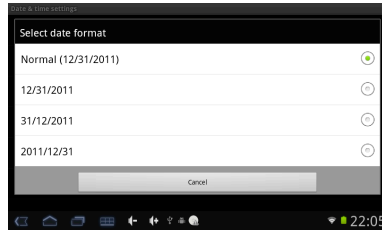


5.5.4.13 About MID

 
Tap "About MID" to check System updates, Status and Legal information as shown below:

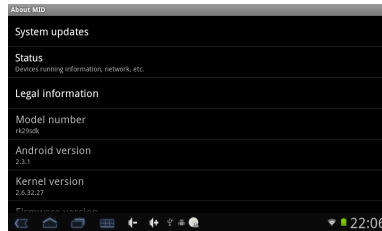

5.6 Desktop Function Icon and Setting


5.6.1 Desktop Function Icon


Tap the icon  on the bottom of the screen to enter into the desktop settings interface as shown below:

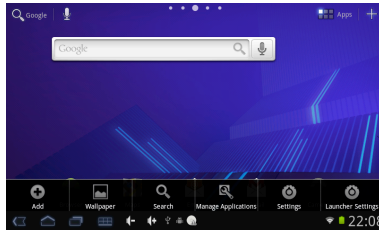 

 
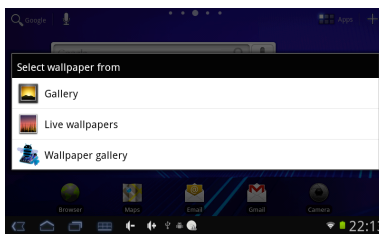 
Shortcut Icons:





1) **Add:** Tap the icon  to enter adding function interface as below, you can add the Shortcuts, Widgets, Folders or Wallpapers to the home screen.

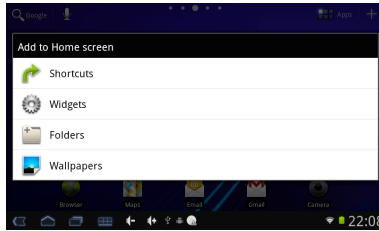

 2) **Wallpaper:** Tap the icon  to select the wallpaper from Gallery, Live wallpapers or Wallpaper gallery.



 Select the picture and the size as you want, tap  to finish the wallpaper setting.

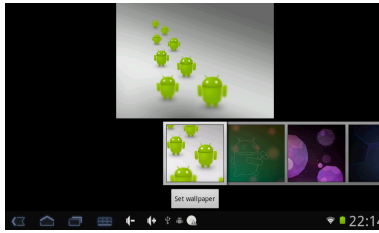



3) Search: Tap the icon  to enter the Google Search.

 


4) Manage Applications: Tap the icon  to enter the management interface of the downloaded applications.




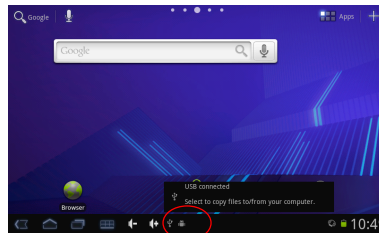 
5) Settings: Tap the icon  to enter the system setting interface, for details refer to Chapter 5.5.4.

6) Launcher Settings: Tap the icon  to enter the AlmostNexus settings interface as below. You are recommended to use factory defaults in this setting, or any change will make some functions not available.

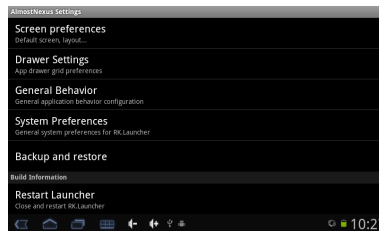


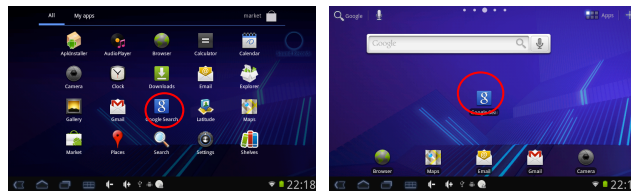 
5.6.2 Desktop Notification



Tap the icons  appeared on the bottom of the screen to check the current notification status as below:

 


5.6.3 Add, Move, or Delete Desktop Icon

Tap the icon  on the desktop to enter the app menu list. Tap and drag the application icon to copy to the current desktop i.e. set the shortcut on the desktop.




Long tap the application icon  on the desktop to enter into the editing mode, which allows you to move the icon and set its location. When you drag the icon to , it turns into the delete function, release the icon to delete it from the desktop.

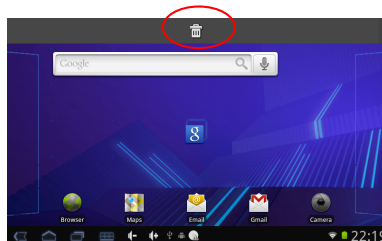

6. Firmware Update

Press the “Power” button to turn off the device before updating (Note: Press and hold the “Power” button for at least 6 seconds if the device can not be turned on normally).

 
Insert the Driver CD and copy the file named “RK2918 Android Upgrade Tool” to your computer desktop (Note: The device can not be updated directly from CD), Then Open file “RKBatchTool.exe” in Folder “RK2918 Android Upgrade”, click the button ① in this current window and choose “update.img” from the popup window, click open, as shown in the picture below:

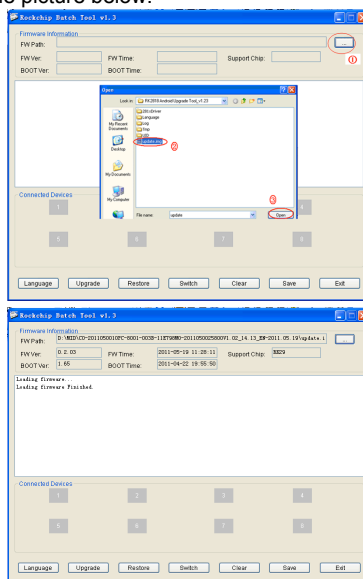


Hold down the MENU button on the device and without releasing it after Device has been turned off; connect the device to the PC by the USB cable supplied with the device.

The “Found New Hardware Wizard” window will pop up on the bottom right corner as shown below. Choose “Install from a list or specific location (Advanced)”, and then click “Next” to install the USB driver, see the picture below:

 
NOTE: The USB port of the PC must be USB2.0, or it cannot be used to update the device.

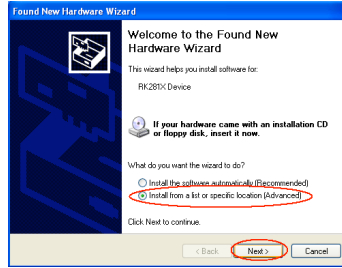

 
Select “Include this location in the search”, and navigate to the following folder “Update Software File” > “291xDriver” > “x86” > “XP” on the CD ROM, then click “OK”. The system will detect and install the driver automatically, finally click “Finish”, see the pictures as below:

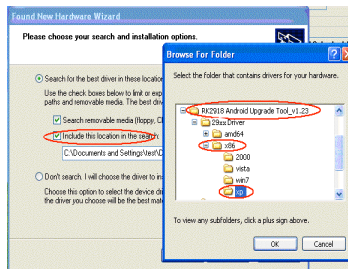


Click “Continue Anyway”.

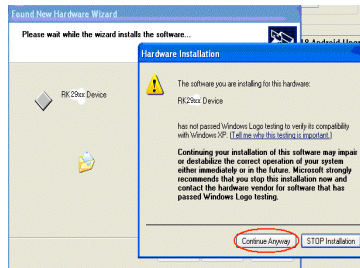 

Click "Finish".

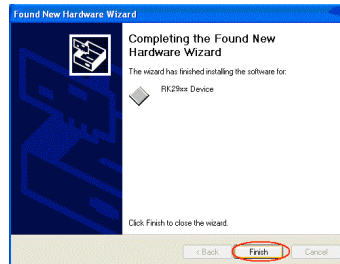 


 Release the MENU button after the icon labeled "1" has turned green, see the picture shown below:

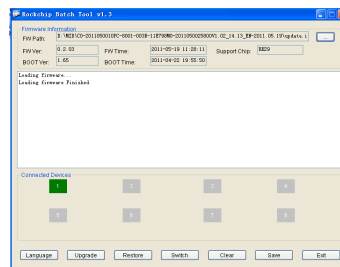


Then click "Upgrade" to start the updating process. During this process lots of information will be shown in the update status box as shown in the image overleaf.

 NOTE: While the system is being updated, the device must not be operated in any way.

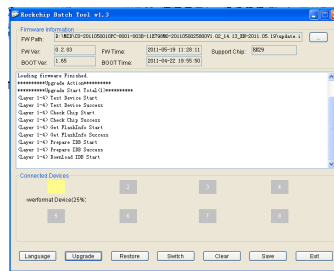

 The system has been updated successfully when the “Upgrade Done Success <1> Fail <0>” notice appears in the status bar as shown below, and device will come to the main interface after run system.
NOTE: Please don't disconnect the USB cable during the updating process because this will cause update failure or possible system failure of the device.

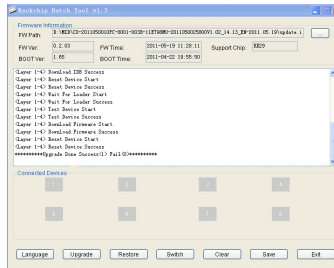

7. Troubleshooting and FAQ

7.1 Troubleshooting

7.1.1 Device can not connect to Wi-Fi

- 1) Ensure the wireless network is working by testing it using another wireless device.
- 2) Ensure the device and the wireless router is within the range of the wireless network to be connected too. Walls or other obstructions will reduce the possible distances between wireless devices.
- 3) Ensure the security password being used is correct.

7.1.2 Device doesn't turn on

- 1) You cannot turn on the device when the battery charge is below the critical level, please charge the battery.
- 2) Press the RESET button on the top of the device and check if it is

restarting normally or not.

3) Check if the charger is connected correctly.

7.1.3 Heat Issues

When running multiple applications, using the screen on its brightest setting, or when being charged, this device can get quite hot. This is normal and should not cause any inconvenience when in use.

7.1.4 System has anomalies and doesn't work correctly

Installing some third-party applications may cause the system to operate incorrectly. Press the RESET button and perform a system reset to resolve this issue.

7.1.5 Cannot set E-mail Account or registration application

1) Ensure that the tablet is connected to a Wi-Fi network and can connect to the Internet.

2) Ensure your E-mail settings have been entered correctly for the account being accessed.

3) Make sure your system time and local time is correct.

7.1.6 Cannot record

Press the RESET button on the top of the device, and then check if the record function works correctly.

7.1.7 The stand-by time of the device is too short

1) The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.

2) Battery life is dependent on usage. High volume, WIFI, and the frequent use may cause the battery to be drained at a higher rate.

7.1.8 No sound via earphone

1) Please check if the volume setting is 0.

2) Please check if audio file is broken, and try to play another audio file to confirm. If the audio file is broken, it may cause severe noise or static.

7.1.9 The color distortion of video or picture display

Press the RESET button on the top of the device to resolve this issue.

7.1.10 Cannot copy files

1) Please check if the device is connected to the computer correctly.

2) Please check if the memory space is full.

3) Please check if the USB cable is broken.

7.1.11 No sound or no image via HDMI Output.

- 1) Please check if the device is connected to an HDMI cable correctly, and the TV settings of the HDMI port is correct.
- 2) Please check if the HDMI cable is broken.
- 3) Press the RESET button on the top of the device, then check if the HDMI output function works correctly.

7.1.12 Other troubles

Please follow up the steps as below to fix the other troubles before you return the MID/Tablet to us:

- 1) Press the RESET button on the top of the device, then check if the function works correctly;
- 2) Upgrade the firmware from the CD and restart the device and then check if the function works correctly.

7.2 Frequently Asked Questions

7.2.1 Will my existing eBooks be compatible with this device?

Most popular e-book formats that are not DRM protected are compatible as long as they are in a supported format: TXT, LRC, PDF, HTM, EPUB, etc. If they are not compatible, an application may be available on APKShare.com, which could assist you.

7.2.2 Will this device play High Definition video?

Yes, the maximum HD resolution is 1920x1080.

7.2.3 Can I add more storage?

Yes, there is a Micro SD card slot on the base of the unit, which supports up to 32GB of additional memory.

7.2.4 Can I use an external keyboard?

No, but there are applications on APKShare.com which may make on screen typing easier for you.

7.2.5 Can I run multiple applications at once?

Yes, if you plan on running several applications at the same time we recommend installing a task manager for the unit to run most efficiently.

7.2.6 Does this device support 3G?

You must use an external 3G USB dongle from your mobile service provider.

8. Limitations of Liability Statement

8.1 Links to Third Party Sites

The Ematic User Manual may contain links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations whatsoever about any other website which you may access through

this user manual. When you access a non-Ematic website, even one that may contain an Ematic logo, please understand that is independent from Ematic, and that Ematic may have no control over the content on that website. In addition, a link to a non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or the use, of such website. It is up to you to take precautions to ensure that whatever you select for your use is free of such items as viruses, worms, Trojan horses and other items of a destructive nature.

8.2 Limitation of Liability

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to hold Ematic entirely harmless from and you covenant not to sue Ematic, or its affiliates, successors or assigns, for any claims related to Ematic. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Android is a registered trademark of Google Inc.; APKShare.com is a registered trademark of APKShare.com.

(All information is subject to change without pre-notice.)